

# MEASURING FOR PERFECT-FIT BLINDS

## 1. Bead Check

Ensure your window has a rubber beading between the window frame and the glass.


If your window doesn't have a rubber beading, it is not suitable for Perfect Fit.



## 2. Clearance Check

Ensure you have at least 3.0cm clearance around the edges from any obstruction, such as handles, hinges or vents.

Measure from the edge of the rubber beading, where it meets the glass.

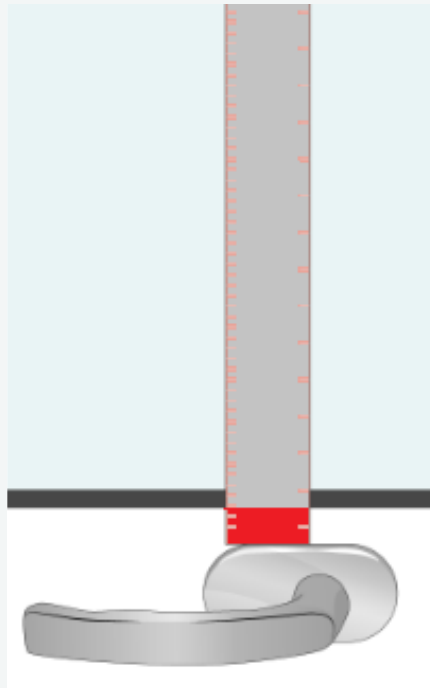


## 3. Measure the frame depth

When configuring your blind, you will be asked to provide your frame depth (AKA bead depth) so we can provide you with the right size bracket which your blind clips on to.

Place a credit card flat against the frame of your window or door, so it's overlapping the glass. Measure the distance between your credit card and the glass. This is your frame depth.

This measurement is usually between 1.8cm and 3.6cm.

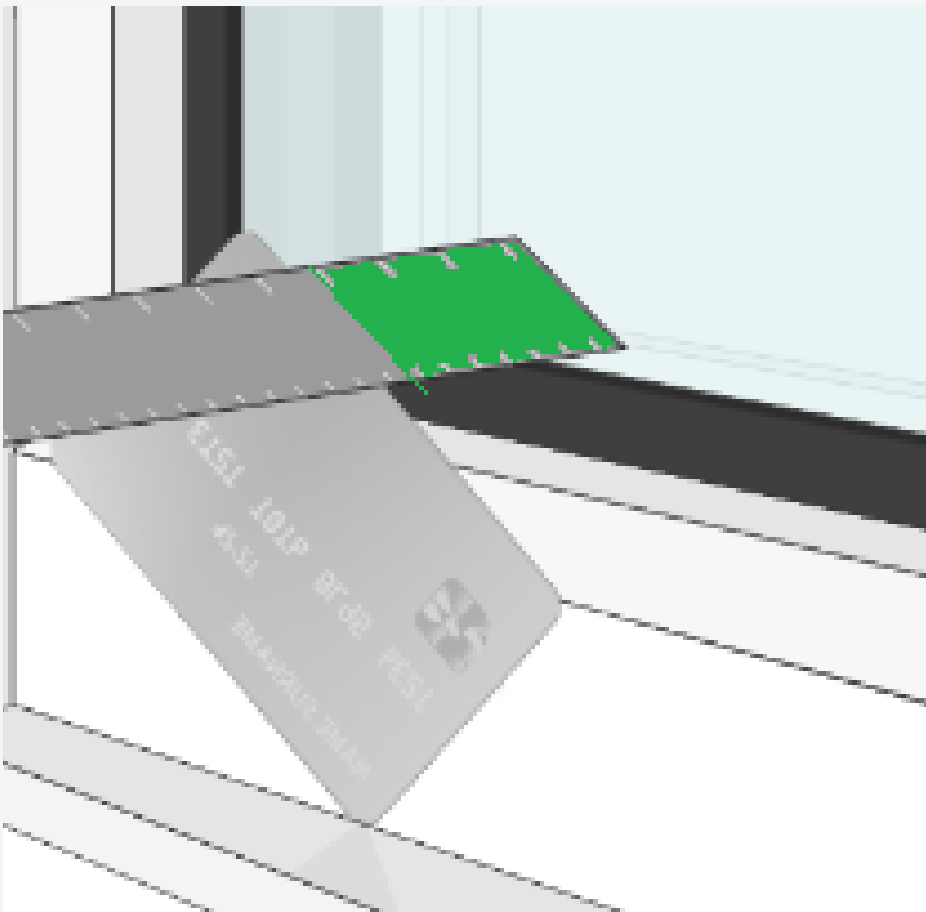

## 4. Measuring your window

Using your tape measure, measure the width and drop of the visible glass pane.

Be sure to repeat this in three different positions across the window and give us the smallest of the three measurements.

Don't include your rubber beading when taking your measurements, only measure the glass.

Don't forget to measure each window and door individually; do not assume that they're all the same size.

