


## PERFECT FIT SHUTTERS FITTING INSTRUCTIONS

### FITTING COMPONENTS

Please check that you have all necessary components (see right),  
If any of the items are missing,  
please call 01924 481 710 or  
email [info@green-brown.co.uk](mailto:info@green-brown.co.uk)



Brackets x4

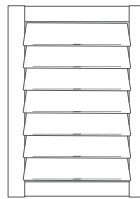


Shutter Blind

Please note, you will need a credit card / loyalty card of sort to help with the installation.

1

### Installing The Brackets


First, attach the brackets to the window using a credit card as a spacer, and slide the bracket down into the window gasket seal. Repeat on all four corners of the window.

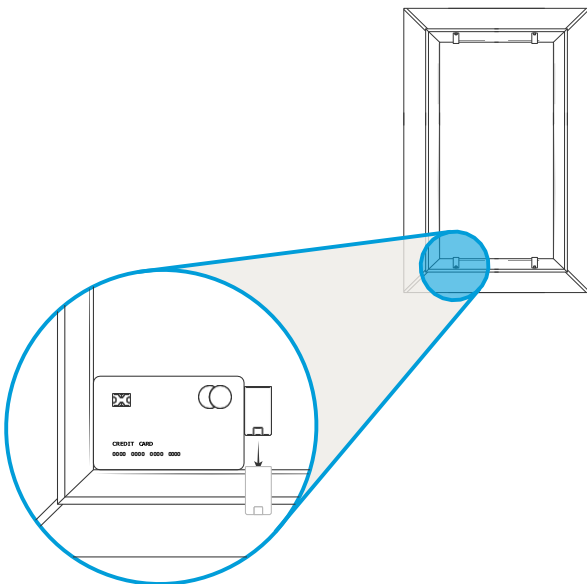

2

### Lining Up The Brackets


Now that the brackets are in place, you can fit the shutters. Line up the cutout on the bottom of the frame with the bracket.

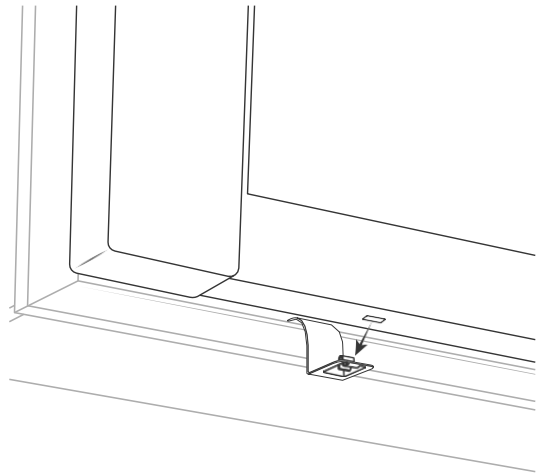

3

### Fit Bottom Edge Of Shutter

Next, slot the left and right cutouts into the bottom brackets. Once this is done, move onto the top brackets.

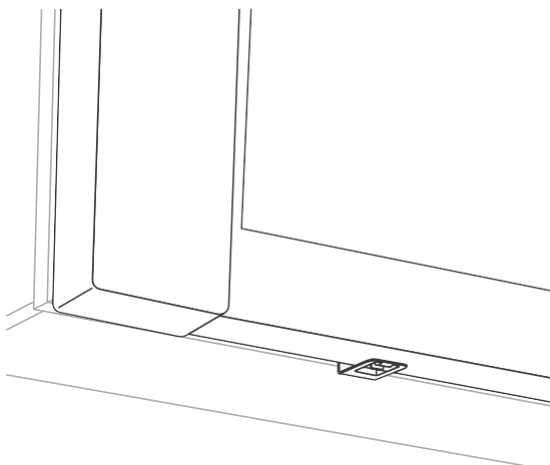

4

### Fit Top Edge Of Shutter

Finally, push the top of the frame into the top brackets. The window is still fully operational, and your Perfect Fit shutter has been successfully installed.

